

# AWO41608

## A.「開門」指示燈


此機具備內置安全檢查裝置，  
當此機出現故障便會自動作出檢查及  
自動修正或調整。

## B.「入水喉關閉」指示燈

請檢查入水喉接駁是否穩固

## C.「清理過濾器」指示燈

# 程序表

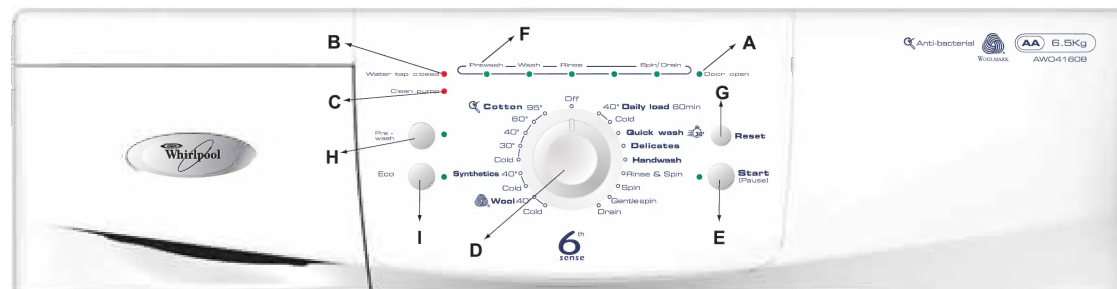

## D.「程序選擇」指示燈

## E.「開始/暫停」旋鈕

## F.「洗衣程序」指示燈



## G.「重設」按鈕

## H. 預洗按鈕

## I. 省電按鈕

洗衣程序	護理標籤	衣物類型 / 骯髒程度  關於溫度的選擇，請遵從護理標籤上的製造商建議	最大洗衣量 公斤	洗衣劑及柔順劑			洗衣功能程序		最大脫水轉速 轉 / 分鐘
				預洗 	主洗 	柔順劑 	省電洗	預洗	
純棉質 冷水；30℃；40℃； 60℃；95℃	 	一般至非常骯髒之床單、桌布及內衣褲、毛巾、襯衫等棉麻衣物。 非常骯髒衣物請選擇額外之「預洗」功能。	7.5	*	是	*	*	*	750
合成纖維 冷水；40℃		一般至非常骯髒之外套、襯衫、罩衫等合成纖維（人造纖維、特雷維拉）或混棉織物。	2.5	*	是	*	*	*	600(1)
60分鐘日日洗 冷水；40℃		輕微骯髒、中度骯髒的棉質或合成纖維衣物。	3.0	—	是	*	—	—	750
30分鐘速洗 30℃		適合穿著時間短之外衣等棉質、滌綸、錦綸及混棉織物。	3.0	—	是	*	—	—	750
纖幼衣物 30℃		窗簾與質料纖細之連身裙、半截裙及襯衫等衣物。	1.5	*	是	*	—	*	600(1)
羊毛 冷水；40℃		只可洗滌有羊毛標記並標明可機洗的羊毛衣物。 如選擇「延遲脫水」功能，切勿讓衣物浸泡過久。	1.0	—	是	*	—	—	600(1)
手洗 冷水		標記為手洗的麻質、絲質或人造絲的衣物。 如選擇「延遲脫水」功能，切勿讓衣物浸泡過久，當洗衣程序結束，會進行輕柔脫水操作。	1.0	—	是	*	—	—	400(2)
過水+脫水	—	與「棉質」程序的最後一次過水及最後脫水相同。	7.5	—	是	*	—	—	750
脫水	—	強力脫水，與「棉質」程序的脫水過程相同。	7.5	—	—	—	—	—	750
輕柔脫水	—	輕柔脫水，與「棉質」程序的脫水過程相同。	1.0	—	—	—	—	—	600(1)
排水	—	只進行排水，並沒有脫水操作。 可於「延遲脫水」程序後，啟動排水操作，然後結束程序。	—	—	—	—	—	—	—

\*可選擇 / 是：必須加入

- 為更好地護理衣物，脫水轉速限制於600轉/分鐘。
- 為更好地護理衣物，脫水轉速限制於400轉/分鐘。

惠而浦乃美國惠而浦 Whirlpool, U.S.A. 的註冊商標。

## 基本程序表



功能資料表			
程序	溫度 攝氏(°C)	洗衣量 (公斤)	程序時間 (大約)(小時:分鐘)*
棉質 ※※	95	7.5	2:15
棉質 ※※※	60	7.5	2:10
棉質	40	7.5	1:59
棉質	30	7.5	1:55
棉質	冷水	7.5	1:54
合成纖維	40	2.5	1:15
合成纖維	冷水	2.5	1:10
60分鐘日日洗	40	3.0	0:55
60分鐘日日洗	冷水	3.0	0:50
30分鐘速洗	30	3.0	0:30
纖幼衣物	30	1.5	0:40
羊毛	40	1.0	0:46
羊毛	冷水	1.0	0:41
手洗	冷水	1.0	0:35

上述功能表之數據是標準於正常條件下測試而獲得，根據 IEC/EN 60456 GB/T4288標準。與用戶使用時的實際耗水、耗電、水溫、水壓以及洗滌衣物種類有關。

※ 時間顯示器可能與表中所列數值有所偏差。洗衣程序會根據洗滌條件自動調節。

※※ 為減少衣物皺褶此機會於主洗步驟結束時及排水前，自動注入冷水降低水溫。

※※※ 標準測試的洗衣程序。

加入洗衣劑，關閉機門並選擇程序

按「使用說明書」中的「洗衣劑及柔順劑」一節所述及在關閉機門後加入洗衣劑。  
將程序選擇旋鈕轉到所需程序及溫度。洗衣程序「開始/暫停」按鈕顯示燈亮起。

選擇所需的特別功能

按下所需的任何特別功能按鈕時，相應的指示燈會發亮。  
當程序與附加功能的組合不適當，選擇會被中止，指示燈會自動熄滅。  
「慳電洗」  
• 延長洗衣時間及低水量洗衣，可獲得滿意的效過及減低能源消耗。  
「預洗」  
• 僅適用於非常骯髒的衣物(含泥沙、粗粒)。洗衣時間會延長15分鐘。

啟動程序

打開水龍頭並按下「開始/暫停」按鈕。「開始/暫停」按鈕旁邊的指示燈會發亮。  
洗衣程序指示燈會順序顯示正進行之洗衣階段；從左至右為預洗、洗衣、過水、脫水/排水操作。  
• 當洗衣程序逐步完成，指示燈會相應熄滅。

「開門」指示燈

當結束洗衣程序後，「完成」指示燈發亮表示可以打開機門。洗衣程序運行期間，機門保持鎖閉，決不能強行打開或會導致損害機件。如在洗衣程序運行期間您急需打開機門，請參閱「程序結束前取消/重設」一節。

紅燈警示

**入水喉關閉**  
洗衣機無水供應或供應不足。打開水龍頭；如指示燈仍顯示，請查閱「使用說明書」中的「故障排除指引」。  
**清理過濾器**  
廢水未泵出。檢查排水軟管是否扭曲及阻塞。過濾器是否需要清潔；在後一種情況請查閱「使用說明書」拆除過濾器。

結束程序

洗衣程序結束後，所有洗衣指示燈會熄滅。開啟機門指示燈會發亮。  
1. 將程序選擇旋鈕轉到「停止」位置。  
2. 關閉水龍頭。  
3. 打開機門並取出衣物。  
4. 讓機門微開，令洗衣鼓乾燥。

程序開始後更改程序、附加功能

1. 按「開始/暫停」按鈕終止洗衣程序。指示燈會發亮。  
2. 選擇新程序和任何特別功能，如需要時也可選另一脫水轉速。  
3. 再次按下「開始」按鈕。新程序在先前的程序中斷之處繼續進行。此程序無需添加洗衣劑。

程序結束前取消/重設

按「重設」按鈕終止之前的預設程序  
• 按「重設」按鈕最少3秒。所有留在機內的水便會於機門被打開前排走。

## AWO41608

### A. "Door Open" Indicator


In this machine, there is a built-in safety function which automatically performs checking, diagnosis and self-adjustment when problem arises.

### B. "Water tap closed" Indicator

Please check the inlet water pressure and tap.

### C. "Clean pump" Indicator


## Program Chart

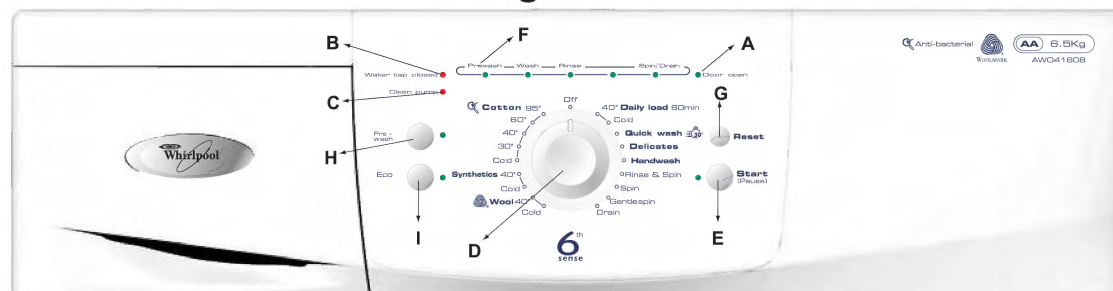

### D. Program Selector Knob

### E. "Start/Pause" button
 
### F. "Program Sequence" Indicator



### G. "Reset" button

### H. Pre-wash button

### I. Eco button

Washing Program	Care Labels	Type of wash/ Degree of dirtiness  For temperature selection, please follow the recommendations on the care label.	Max Load Kg	Detergents and Softener			Wash Function Selection		Max Spin Speed rpm
				Pre-wash 	Main Wash 	Softener 	Eco	Prewash	
Cotton Cold Water; 30°C; 40°C; 60°C; 95°C	 	For heavily soiled to normally soiled bed sheet, table cloth, underwear, towels, shirts, made of cotton or linen. Please select an additional "Pre-wash" function for heavily soiled clothes.	7.5	*	Yes	*	*	*	750
Synthetics Cold water; 40°C		Normally soiled jackets, blouses, clothes and coats made of synthetics fibres (polyester fiber, trevira) or blends with cotton.	2.5	*	Yes	*	*	*	600(1)
Daily load 60 min Cold water; 40°C		Slightly or normally soiled clothes made of cotton or synthetic.	3.0	—	Yes	*	—	—	750
Quick wash 30 min 30°C		Shortly worn outer clothing made of cotton, polyester fibre, polyesteramine and blends with fabric.	3.0	—	Yes	*	—	—	750
Delicate 30°C		Curtain and skirts, blouses, coats made of delicate materials.	1.5	*	Yes	*	—	*	600(1)
Wool Cold water; 40°C		Only woollens labeled with the woolmark and identified as machine washable. If the "Rinse hold" function is chosen, do not leave the clothes to soak for too long.	1.0	—	Yes	*	—	—	600(1)
Handwash Cold water		Clothes made of linen, silk, viscose and labeled as handwashable If the "Rinse hold" function is chosen, do not leave the clothes to soak for too long. The Gentle Spin function will operate when the program ends.	1.0	—	Yes	*	—	—	400(2)
Rinse + Spin	—	Same as the last rinse and spin in the "Cotton" programme.	7.5	—	Yes	*	—	—	750
Spin	—	Intensive Spinning, same as the spin cycle in the "Cotton" programme.	7.5	—	—	—	—	—	750
Gentle spin	—	Gentle spinning, same as the spin cycle in the "Cotton" programme.	1.0	—	—	—	—	—	600(1)
Drain	—	Drain only no - spinning. It can be treated as no-spin option after "Rinse Hold" to end programme.	—	—	—	—	—	—	—

\* Optional/Yes: dosing required

1 For caring garment quality, spin speed is restricted to 600rpm in this programme.

2 For caring garment quality, spin speed is restricted to 400rpm in this programme.

Whirlpool is a registered trademark of Whirlpool USA

## Basic Programme Chart



Performance Data			
Programme	Temperature (°C)	Load (kg)	Programme Duration (approximately) (hour:minute)
Cotton※※	95	7.5	2:15
Cotton※※※	60	7.5	2:10
Cotton	40	7.5	1:59
Cotton	30	7.5	1:55
Cotton	Cold water	7.5	1:54
Synthetics	40	2.5	1:15
Synthetics	Cold water	2.5	1:10
Daily Load 60 min	40	3.0	0:55
Daily Load 60 min	Cold water	3.0	0:50
Quick Wash 30 min	30	3.0	0:30
Delicate	30	1.5	0:40
Wool	40	1.0	0:46
Wool	Cold water	1.0	0:41
Handwash	Cold water	1.0	0:35

Performance data is measured in normal condition in compliance with IEC/EN60456 GB/T4288 standard. Energy and water consumption of domestic use is subject to water pressure, temperature and the type of wash.

※ The actual programme time may deviate from the values in the table. The washing programme will be adjusted automatically according to the washing condition.

※※ To reduce the water temperature for preventing of wrinkles, cold water is added automatically after the main wash cycle and before draining process.

※※※ Standard Testing for Washing Programme

#### ADD DETERGENTS, CLOSE THE DOOR AND SELECT THE PROGRAMME

Add the detergents as described in the "Detergents and softener" section in the User Manual and close the door after adding detergents.

Turn the programme selector knob to the desired programme and temperature. The indicator next to the "Start / Pause" button is flashing.

#### SELECT DESIRED FUNCTION

Press the desired option button and the corresponding indicator lights up. When the combination of selected programme and the desired additional option is not practicable, the option will be cancelled and the indicator switches off immediately..

##### "Eco"

- With a prolonged washing duration and lower washing temperature, a desirable washing performance can be obtained and reduces energy consumption.

##### "Prewash"

- Suitable for heavily soiled loads (for example with sand and dust) and the programme duration is prolonged for 15 minutes.

#### Programme Start

Open the tap and press the "Start/Pause" button. The indication lamp next to the "Start/Pause" button lights up. The programme sequence indicator shows the current programme phase, running from left to right through Prewash, Wash, Rinse, Spin/Drain.

\* When the programme phase is finished, the corresponding indicator goes out.

#### "Door Open" Indicator

Before the programme starts and after it ends, the indicator will light up and the door of the machine can be opened. When the Programme is running, the door will remain locked and cannot be forced open or the machine will be damaged. If you need to open the door urgently during the programme is running, please refer to the Chapter of "Cancel / Reset A Running Programme Before It Ends".

#### Red Indicator for Warning

##### Water tap closed

The appliance has no or insufficient water supply. Open the water tap; if the indicator still lights up, refer to the "Troubleshooting Guide" in the Instructions for Use.

##### Clean Pump

Waste water is not pumped out. Check whether the drain hose is kinked or clogged. Clean the filter if it is the latter case. Please refer to the chapter of "Removing the filter" in the Instructions for Use.

#### Programme Ends

- All of the lights of the programme sequence are off. "Door Open" indicator lights up.

1. Turn the Programme selector to the "Off" position.
2. Close the water tap.
3. Open the door and unload the machine.
4. Leave the door ajar to allow the drum to dry out.

#### Change Programme and Options after the Programme Starts

1. Press the "Start/Pause" button to pause the Programme. The indicator flashes.
2. Select the new programme and any additional function. Select the spin speed if necessary.
3. Press the "Start/Pause" button again to start a new programme.

The new Programme continues at the same position where the previous Programme was interrupted, so no additional detergent is needed.

#### Cancel / Reset A Running Programme Before It Ends

Press the "Reset" button to cancel a programme before the programme ends

- Press the "Reset" button for at least 3 seconds. Any water that remains in the appliance will be drained out before the door is opened.